

# Einbauanweisung VW Bus T5 + T6 + T6.1

HR01-X280A03

## Cup-Kit Fahrwerke 40270-1 / -2 / -3 / -4 / -7

#### Warnung:

Nichtbeachtung dieser Einbauanweisung kann zu Schäden am Fahrzeug und zu Personenschäden führen. In diesem Fall weist H&R jegliche Verantwortung zurück.

<u>Achtung:</u> Nach dem Umbau sind Spur, Sturz und die Scheinwerfereinstellung gemäß Werkstattangaben zu kontrollieren bzw. einzustellen.

<u>Hinweis:</u> Einbauanweisungen ersetzen nicht das Werkstatthandbuch des Fahrzeugherstellers; sie erheben keinen Anspruch auf Vollständigkeit und/oder Berücksichtigung aller möglichen Toleranzen und Fehlerquellen. Die aktuelle Version dieses Dokuments finden Sie auf unserer Webseite www.h-r.com nach Auswahl Ihres Fahrzeugs und des Produkts unter den Produktdokumenten.

### **Vorderachse (VA):**

- Die Original Muttern müssen wieder verwendet werden
- Prüfen Sie vor der Montage das Maß zwischen den Bremsschlauchhaltern, Abb. 1.
  Es muss 135 mm oder kleiner sein; die Halter müssen erforderlichenfalls nachgebogen werden.
  Bei Nichtbeachtung kann der Bremsschlauch Kontakt zum Rad bekommen und beschädigt werden!

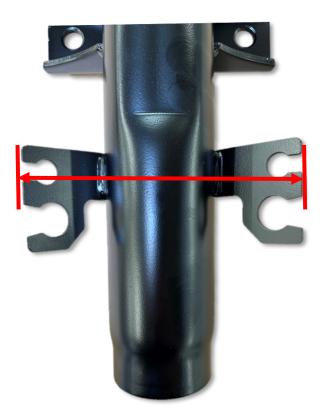


Abb. 1: Abstand Bremsschlauchhalter



# Installation Instructions VW Bus T5 + T6 + T6.1

HR01-X280A03

# Cup-Kit suspensions 40270-1 / -2 / -3 / -4 / -7

#### Warning:

Any non-observance of these installation instructions might lead to damage of the car and injury of persons. In this case H&R rejects any responsibility.

<u>Attention:</u> After installation wheel alignment and brake-power regulator have to be checked and adjusted to the factory specifications if necessary. Headlights also have to be checked and adjusted if necessary.

**Note:** Installation instructions do not replace the vehicle manufacturer's handbook; they do not claim to cover complete fitment and/or to regard every possible tolerance or source of error. Please find the latest version of this document on our website www.h-r.com after selecting your vehicle and the product under product documents.

## Front axle (FA):

- OE nuts must be reused.
- Prior to installation please check the dimension between the brake hose mounting brackets, Fig. 1.
  It must be 135 mm (5.3") or smaller; the brackets have to be bent to this dimension if necessary.
  - --> Disregarding this advice may lead to a contact of brake hose and wheel and thus damage the brake hose!

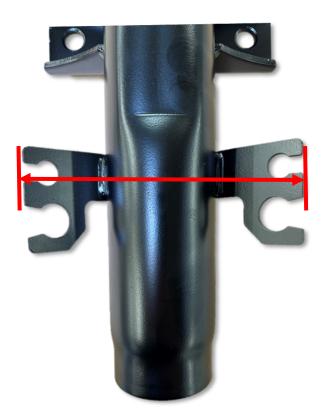


Fig. 1: Distance hose holder